
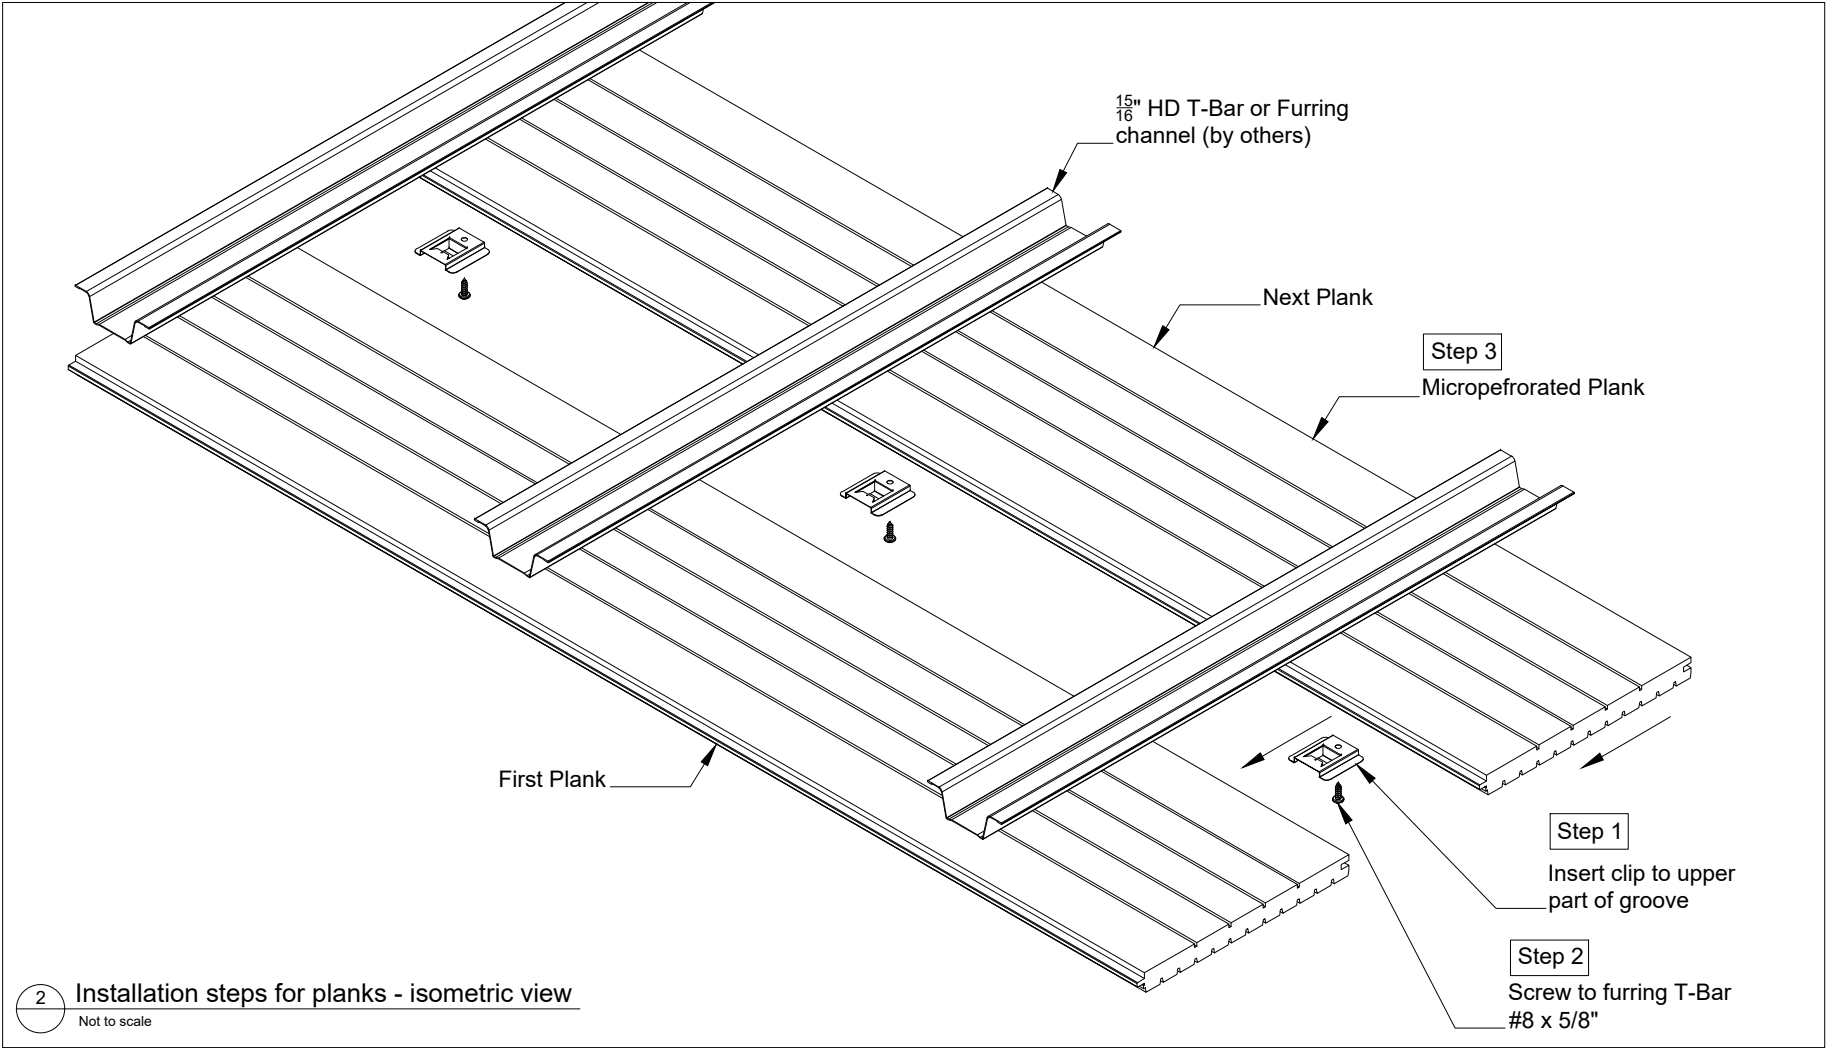


This drawing is copyright. It must not be copied, used or disclosed to third partners without our permission. It remains MCMA property and must be returned on request.

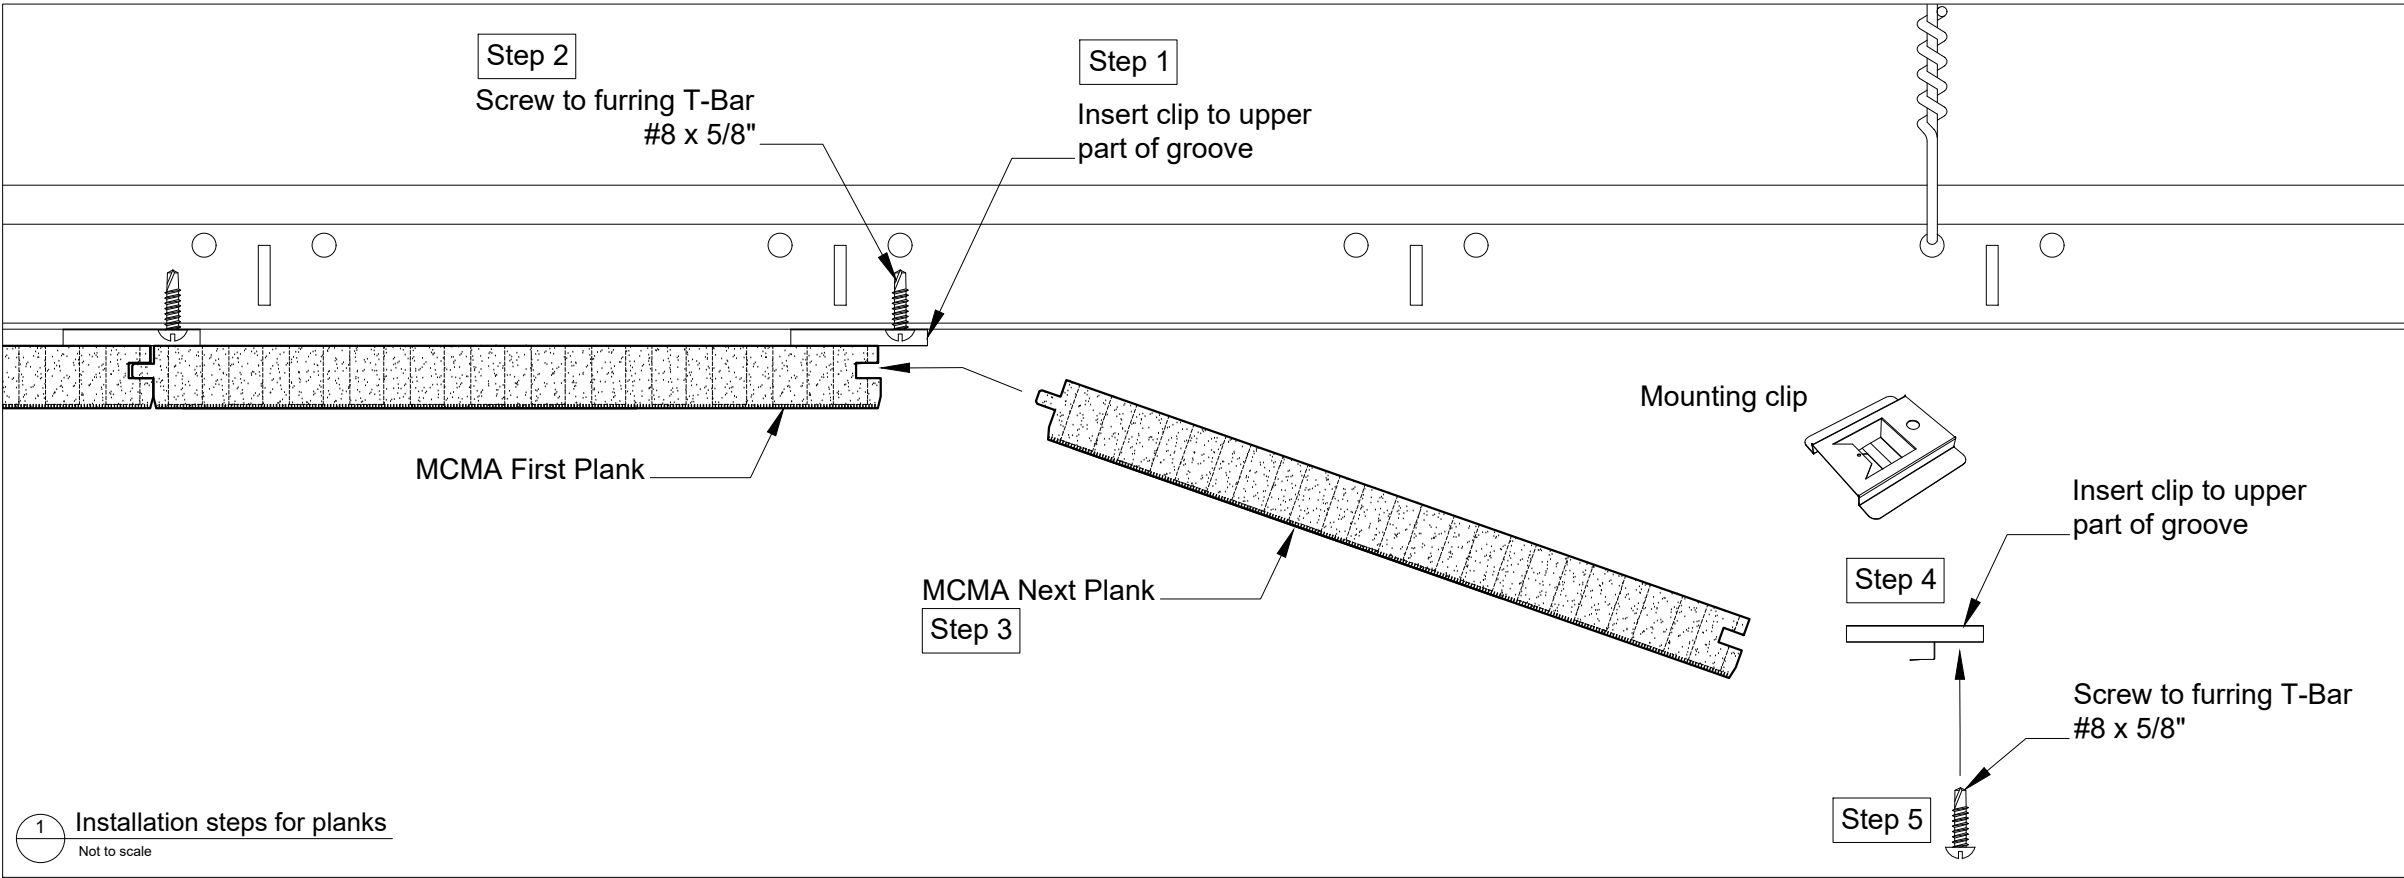

CEILING PLANKS INSTALLATION INSTRUCTIONS

- MCM Acoustical Direct Mounting System is designed to install ceiling planks directly to ceiling T-Bar or furring channels using an MCMA clip.
- Each plank weighs about 2 lb per sq ft, therefore Heavy Duty T-Bars or Furring Channels will be required.
- Secure the first plank / starter plank to the ceiling substrate.
- Snap the MCMA clip into the grooved edge of the first plank.
- Screw the MCMA plank clips directly to the HD T-Bar / Furring Channels or other type of substrate, such as plywood straps.
- Install the next plank by inserting its tongue edge into the first installed plank groove.
- Repeat snapping MCMA plank clip into the grooved edge of the second plank, and repeat the following steps.

MCM
ACOUSTICAL

MCM Acoustical Inc. | 6860 Rexwood Road
Mississauga | Ontario | Canada | L4V 1L8
T: 905.670.3733 | F: 416.665.9419
E: info@mcmacoustical.com | WEB: www.mcmacoustical.com